



TD-5011 LANCING DEVICE and TWIST LANCET

The lancet can be ejected anytime.

Lancet



legible yellow button indicates when the device is ready to use

9-level depth selection

A Clear Cap
(For AST use only)



SPECIFICATIONS

LANCING DEVICE

Model Number: TD-5011

Penetration Depth Setting: 9-level comfort dial

Penetration Range: 0.4 mm to 1.5 mm

Dimension: 109 (L) x 18 (D) mm

Weight: 17 g

Priming of Device:

Push button to prime with status display window

Lancet Ejection: Yes

Alternative Site Testing: Yes

TWIST LANCET

Model Number: TD-5084

Lancet Gauge: 30G

Weight: 0.4g

Dimension: 32.6mm x 6.4mm

Units per Carton: 100 pcs/box and 140 boxes/carton

Net Weight per Carton: 7.62 kg

Gross Weight per Carton: 8.62 kg


Quality Compliance

ISO 11137, ISO 11737,
ISO 10993-10
ISO 10993-5


ISTA 2A Compliance

ASTM E171, ASTM D4332,
ASTM D642, ASTM D999,
ASTM D5276


INSTRUCTION FOR USE

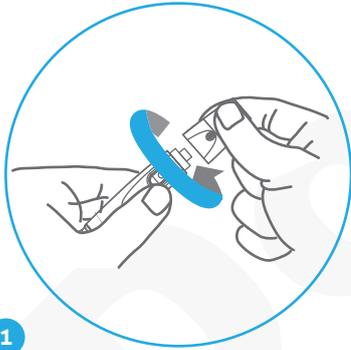


1
Remove the cap of the lancing device.

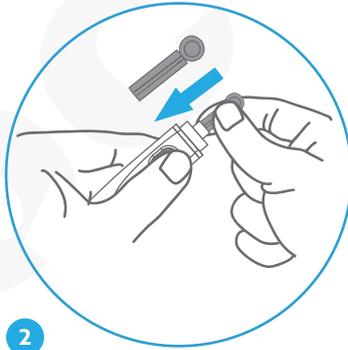


2
Insert a lancet into the lancet holder and push down firmly until it is fully secured.

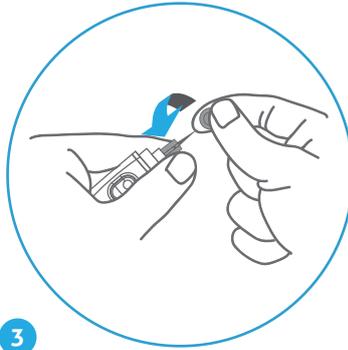

3
Twist the protective disk off the lancet.

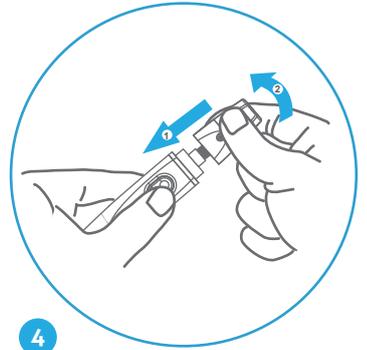


4
Replace and twist the cap until tight

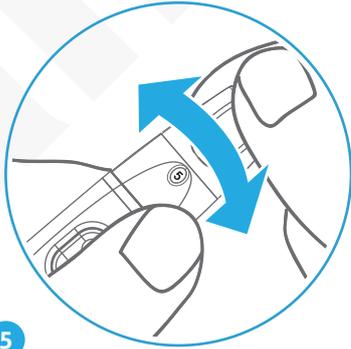

5
Hold your finger on the cap of depth number NOT the body. Select the desired depth of penetration by turning the adjustable tip as show in the picture.

Adjustment:


- 1 - 3 soft or dedicated skin
- 4 - 6 normal skin
- 7 - 9 thick or callused skin

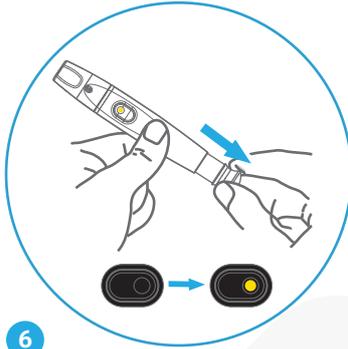


6
Pull the cocking control back until it clicks. You will see a color change inside the release button when it is ready.




7
Lancing the finger
Press the lancing device's tip firmly against the lower side of your fingertip. Press the release button to prick your finger, then a click indicates that the puncture is complete.

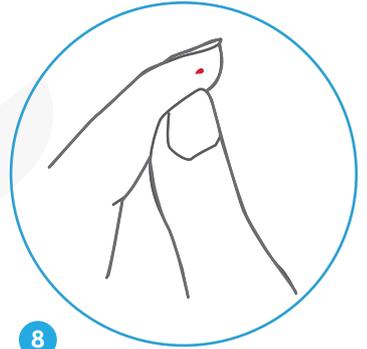

8
Remove the device from the puncture site. After penetration, remove the first drop of blood with a clean cotton swab. Gently squeeze the punctured area to obtain another drop of blood. Be careful NOT to smear the blood sample. Apply the blood to the test strip.

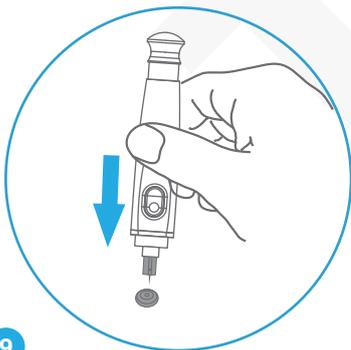

9
Remove the lancet by pulling the cap off first. Safely dispose of the used lancet by placing the protective disk on a hard surface, and pushing the exposed tip into the disk.

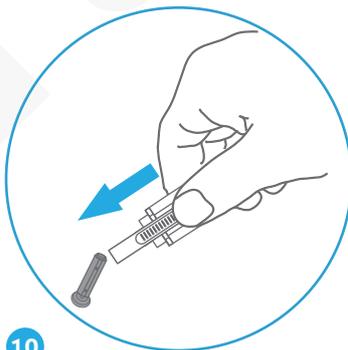

10
Slide the ejector forward to remove the used lancet. Dispose of the lancet according to your local regulations.



TD-5011 LANCING DEVICE and TWIST LANCET



www.taidoc.com

TaiDoc Technology Corp.

B1-7F., No.127, Wugong 2nd Rd., Wugu Dist.,
New Taipei City 24888, Taiwan
Tel : +886-2-6625-8188 Fax : +886-2-6625-0288